

User Manual




MODELS

True Wireless Stereo Earbuds Manual

Product Components:

1. Model S Earbuds 1 Set
2. Charging Case 1 Set
3. USB Cable 1 Set
4. User Manual 1 Set

Description of product structure

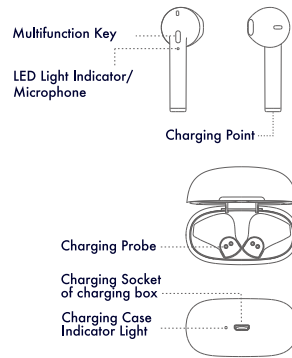

Wearing way

Please put the earbuds into the cochlea gently, and adjust to the suitable angle.



Powering on

Method 1: Open the charging box, the earbuds will power on automatically and the left and right earbud will be connected. Take out two earbuds, the master earphone (Default left earbud as master) orange and white lights flash alternately.

Method 2: If the earphone is not in the charging box or the charging box is out of power, and the earbuds are powered off, long press the earbuds for 2 seconds separately, then the right and left earbuds will be paired automatically. The LED light of master earbud will flicker with orange and white lights alternately.

Wireless connection

When it's the 1st time to use "Soundbay Model S", power on it according to method 1 or 2. Orange and white lights of master earphone will flicker alternately. Turn on the wireless function of the phone to search nearby wireless devices, and connect to the device "Soundbay Model S". When it's showed with "connected", means connected to the phone successfully. For later usage, power on the earbuds according to method 1 or 2, the earphones will connect automatically with the phone which was connected with last time. If the phone is not nearby or its Wireless function is off, the earphone will be at searching

status (The LED light of earbuds will be orange and white and flicker alternately).

Notice

1. The pairing mode will last for maximum 180 seconds. If no pairing is conducted during this period, the earbuds will be put into standby mode. If you need to reconnect, please follow "power on" and "Wireless connection" steps.

2. The connection will be disconnected once the earbuds is far away from the phone's connecting range. It can be reconnected automatically if the earbuds come back into phone's connecting range within 180 seconds.

Turning off

Method 1: Put the earphone into the charging box, close the cover of the charging box, the earbuds will be powered off automatically (if the battery of the charging box is 0, the earphone won't power off automatically).

Method 2: Long press any one of the earbuds for 4 seconds, the orange light flash quickly for 3 seconds and then off, and the earphone is off.

Note: The earphone is disconnected and will not be reconnected within 10 minutes without any operation. It will automatically shut down.

Answer a call:

When call is coming, short press either one of the earbuds to answer.

Ending a call:

During the call, short press either one of the earbuds hang up.

Rejecting a call:

When calling, long press either one of the earbuds for 1 second to reject.

Call switching mode:

When calling, long press either one of the earbuds for 1 seconds, switch from the earbuds to the phone, and then long press to switch from the phone to the earbuds.

One-key Siri:

In standby/music mode, double-click either one of earbuds to activate/close Siri (This function is only available by IOS system).

Music play

1. Play/pause: when music is playing, short press either one of earbuds to pause music, and then short press either one of earbuds to resume play.

2. Last song: in music state, long press left earbud for 2 seconds to switch to the last song.

3. Next song: in music state, long press right earbud for 2 seconds to switch to the next song
4. Under mono mode, long press any one of earbuds for next song
5. Auto play: Receiving a call in music mode, it will revert to the music mode automatically after ending a phone call.

Charge for the charging box

Low battery prompt of charging box: Open the charging box, the white light on the bottom of the charging box flashes quickly, it shows that the charging box is low power, prompting to charge. When charging the charging box through the USB cable, the orange light on the bottom of the charging box flashes and shows the charging box is being charged. After the charging box is fully charged, the orange indicator keep lighting.

Charging earbuds

When earbuds power is low, the voice prompt say low battery (once every 5 minutes, no more than 3 times). Put the earbuds back into the charging box and close the cover lid to charge the earbuds. During the charging of the earbuds, the orange light is still on and after fully charged will be off.

Product specifications:

Model: SoundBay Model S

Earbuds size: 17.8x19.62x43.58mm

Charging box size: 60x26x49mm

Wireless version: Bluetooth v5.0

Wireless range: 10m

Input power supply: DC 5V/1A

Earbuds battery: 3.7v /30mAh

Charging box battery: 3.7v /500mAh

Playtime: about 3 hours

Charging time of charging box:

about 3 hours iOS power display: compatible

Troubleshooting:

If wireless earbuds are not connected with your phone, please try the following steps:

- Please make sure the earbuds are fully charged;
- Please make sure the earbuds is power on;
- Please make sure the earbuds are not paired with other devices;
- Please make sure the mobile phone BT function is enabled, and BT function has already been on;
- Please make sure that the distance between the earbuds and mobile phone is within available connection range.

Safety precisions:

1. Please follow the instruction of this user manual and do not take any reason to disassemble or modify the device, otherwise it may cause earbuds failure or burnout.
2. Do not drop the product to any liquid or wash in water
3. Do not charge the earbuds with charger which is over-voltage. Ensure your charger is limited within 5V/1A. Or it will damage the battery.
4. Please use or store product in room-temperature environment. Do not place the device in an environment where the temperature is too high or too low (Below 30F degrees or above 130F degrees)
5. Do not block any mouth of earbuds, such as charging interface, LED indicator or microphone.
6. Do not use the earbuds overtime and over-volume, or it may make you feel dizzy or damage your hearing.
7. Do not use the equipment under thunderstorm environment. Thunderstorm may cause abnormal operation of the equipment, signal interruption, etc.

Thank You!